

How to use the AIM Space Viewer

The **AiM Space Viewer** will allow you to look at the floor plans for any Property in AiM. In order to open and use the Space Viewer, please follow these steps:

1. Log into the AiM system, and go to the **Propery** screen from the main Menu.

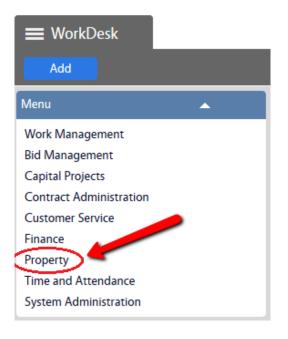

2. Click the magnifying class next to Property Profile to Search

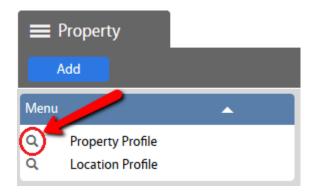

3. Search for the building by entering the name into the **Description** field. If you know the building code you can enter it into the **Property** field.

E Property Profile					Ab	out Logout
Execute Advanced Sear	ch Reset					AiM
Action	Display Order		Sort	Operator		Â
New Query	County		=	- Q		
View	Campus	- •	=	- 9		
	Property		- =	- 🦾		
	Description		contains	•		
						E
	Status		- =	•	Q	
	Property Type		=	- Q)	
	Property Class	- •	- =	• Q)	

NOTE: There are many fields available to refine your search.

- 4. After you enter your search criteria, click **Execute**
 - I used "coliseum" as an example search for the Description field.

Property	Profile				
Execute	Advanced S	earch Reset			
Action		Display Order		Sort Ope	erator
New Query		County		= •	Q
View	•	Campus		= 🗸	Q
		Property	- •	= 🗸	٩
		Description	- •	contains 👻	coliseum
		Status		= 👻	Q
		Property Type		= -	<u> </u>

5. Select AA_S0601


Property Profile			About	Logout
Search				AiM
Action	Property ↓	Description	<u>County</u>	<u>Campus</u>
Export	AA_50601	Beard-Eaves Memorial Coliseum	LEE	AA
View				

6. In the Property Profile, under the Location section, select the desired Location (Room #)

- For this example we will use Location 1000
- This will open the Location profile.

Property Profile								About	Logout
Search Browse									AiM
Action <u>ViewFinder</u> <u>Email</u> <u>Print</u> View	AA_S0601 Beard-Eaves Memorial Coliseum					02:04 PM Last Edited /2015 07:32			
Extra Description Eloors Account Setup Utility Account Setup Square Footage General Information Financial Information Emergency Information Zones	County Campus	Address 2 LEE COUNTY City AUBURN County LEE					Status Property Type	IN USE BUILDING-A	-AU
Contact Information Assignment Defaults Support Shops Deeds	Location	AUBURN	Country Code	US UNITED STAT	ËS		Property Class	E&G	
Envelope Materials	Location De	scription			Floor	Room Type	Space Type	Status	
Commissioning Plan	UTIL001 CC	UTIL001 COLISEUM BOILER PLANT & SWIMMING POOL					VACAN	π	
Inactive Locations	1000	-			01	520	ASSIGNABLE	OCCU	PIED
Sent Email	<u>1002</u>				01	525	ASSIGNABLE	OCCU	PIED
User Defined Fields	<u>1002A</u>				01	525	ASSIGNABLE	OCCU	PIED
<u>Status History</u> Related Documents	<u>1002B</u>				01	525	ASSIGNABLE	OCCU	PIED
nearce bocanents	<u>1002C</u>				01	525	ASSIGNABLE	OCCU	PIED

7. Notice the Action menu in the top left. Select **Space Viewer**

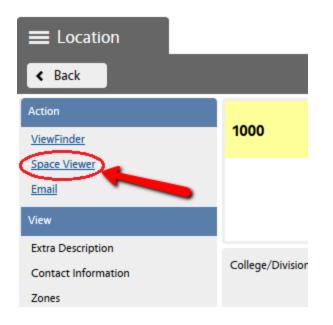

- 8. This opens the **CAD Viewer**, and you'll see the room hatched in a green pattern on the location/room.
 - If you want to zoom into the room, click your mouse once on the room, then click the + magnifying glass icon.



NOTE: You can use the **Zoom Reset** if you only see a spec in the Cad Viewer and this will zoom the image to its extents.

NOTE: This viewer will be updated in the fall because currently it is not very user friendly!

9. Click Done to exit the CAD Viewer (Space Viewer)

